

**NAME**

set – define the user angle of a motor

**SYNOPSIS**

```
set motor user_angle
```

**DESCRIPTION**

The `set` macro is used to establish the `user_angle` for the motor specified by the argument `motor`. It is most often used to set the zero of a motor during an alignment procedure.

The macro uses the built-in function `chg_offset()`.

**EXAMPLE**

```
set th 0
```

**SEE ALSO**

```
motors set_dial zero
```