

NAME

set_dial - define the dial position of a motor

SYNOPSIS

```
set_dial motor value
```

DESCRIPTION

The set_dial macro is used to set the dial position to *value* for one *motor*.

The macro use the built-in functions chg_dial() and chg_offset().

EXAMPLE

```
set_dial th 0
```

SEE ALSO

motors set