

**NAME**

wa – list all motor positions

**SYNOPSIS**

wa

**DESCRIPTION**

The wa macro lists the positions of all configured motors in both *user* and *dial* units.

**SEE ALSO**

motors wh wm