

**NAME**

zero – search for or set a motor’s mechanical zero

**SYNOPSIS**

```
zero motor [motor ... ]
```

**DESCRIPTION**

The `zero` macro is used to set the dial angles to zero for motors equipped with a home-position feature. A search for the mechanical zero is undertaken when using the Microcontrole IP28.

**EXAMPLE**

```
zero the ome phi psi
```